



**Indo
Pacific
GAMING**

just imagine...

Card Deck Verifiers

OptiCard Industrial



OptiCard has three operating modes: **Count**, **Verify** and **Validate**. (**Validate** mode is only available for model YN2B).

Count - **OptiCard** starts in Count mode. Count mode is used to count the number of cards in a stack or deck. **OptiCard** can count up to 65 cards at one time (depending on the card width). To select a different operating mode, press the button at the top-right screen. The name of this button is either Count, Verify, or Valid, depending on the current operating mode. In Verify and Validate modes, the expected number of cards appears at the bottom of the Verify or Valid button.

Verify - Verify mode is used to check the amount of cards in one or more stacks of cards. If a stack has more than the specified number, the **OptiCard**

displays the amount that the stack exceeds the desired number. If a stack has fewer cards than the desired number, the **OptiCard** displays a negative number to show how many cards the stack is missing. When a stack has exactly the specified number, the **OptiCard** displays "OK".

Validate (for model YN2B) - Validate mode is used to check that all cards are legitimate and legal cards. This mode only works with cards specifically marked for **OptiCard**. Validate mode also checks that one or more stacks of cards contain a specific number of cards, just like Verify mode.

Indo Pacific Gaming
Unit 5 46-48 Buffalo Road
Gladesville NSW 2111
Australia

Phone: 61 2 9807 4911 Fax: 61 2 9807 4944

Email: sales@indo.com.au